IT - Istruzioni posa

Prima di iniziare a posare il pavimento Cover-floor è necessario verificare che il prodotto non presenti difetti di produzione.
Materiale non conforme all'ordine non verrà sostituito dopo la posa in opera. Lasciare le confezioni ancora sigillate nell'ambiente in cui andranno posate per almeno 48 ore ad una temperatura di 18/22°C e 40/60% di umidità relativa dell'aria.
Aprire i pacchi solo al momento dell' installazione.

Il pavimento Cover-floor è adatto alla posa flottante su impianti di riscaldamento a pavimento ad acqua a temperature di esercizio tra i 25/30°C.
Spegnere l'impianto di riscaldamento 24 ore prima della posa.
Trascorse 24 ore dalla posa è possibile attivare l'impianto aumentando gradualmente la temperatura di 2°C al giorno.

SOTTOFONDO

Il sottofondo deve rispettare i parametri della normativa Uni 13813.
La superficie di posa dovrà essere asciutta, liscia, piana, portante, pulita e uniforme.
Nel caso di dubbi sull'idoneità del sottofondo contattare Italflooring per supporto tecnico.

PRECAUZIONI

Cover-floor non è adatto per uso esterno, solarium, spa, saune ed in generale negli ambienti dove temperatura e umidità superano i valori indicati.
Applicare dei feltrini sotto ai piedi di tavoli, sedie, poltrone, divani, ecc..
Quando devono essere spostati gli arredi, è consigliabile sollevarli anziché trascinarli. Utilizzare sedie per ufficio con ruote in gomma secondo la normativa vigente.
Non usare mai zerbini con fondo in lattice perché potrebbero macchiare in modo permanente il pavimento

PULIZIA E MANUTENZIONE

Il pavimento deve essere pulito prima con una scopa oppure con l'aspirapolvere,successivamente utilizzare un panno umido ben strizzato.
Usare sempre un detergente liquido neutro per pavimenti vinilici, diluito in acqua come indicato dal produttore. Non utilizzare sostanze aggressive contenenti glicerina poiché possono intaccare in maniera
permanente la superficie del pavimento.
Macchie di sporco difficile vanno trattate nello specifico.

PER ULTERIORI CHIARIMENTI RIVOLGERSI AL RIVENDITORE

200*400mm(单页 正反面印刷)

EN - Installation guide

Please read the installation guide before the installation of the floor.
The installer has the responsibility to inspect the floor surface before the installation to ensure that there are no visual defects.
If visual defects are present, contact your retailer immediately.
Leave Cover-floor in the installation room for 48 hours at 18/22°C at 40/60% of umidity.
Cover-floor is compatible with floor heating, but the subfloor's temperature should not exceed 25/30°C
Turn off the heating 24 hours before and after installation, then gradually increase the temperature 2°C a day.

SUBFLOOR

The subfloor must be clean, smooth, flat and dry before installation.
If you have doubs about the suability of the subfloor, please contact Ital-flooring for technical support

MAINTENANCE

Cover-floor is not suitable for any outside use, solarium, saunas.
To protect against scratching from furniture feet by using wide free-mooving castors,glides or fets pats.


CLEANING

First of all to remove all dirt and dust from the flooring with a brush or vacuum clean, then clean with water and a neutral appropriate cleaning agent at least twice and until the water stays clean.
Never use cleaning product that contains glycerin/damage resilient floor surfaces.

FOR QUESTIONS PLEASE CONTACT YOUR AUTHORIZED DEALER.


200*400mm(单页 正反面印刷)

1. Build starting triangles

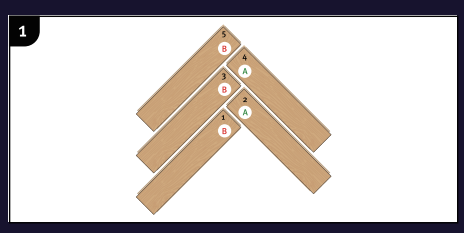


Take B-strips and A-strips and position them as shown above.

Note! *The number of strips varies depending on the width of the strips used.*

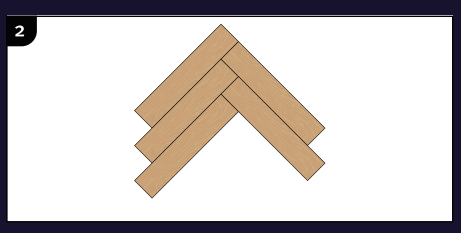

Install the strips precisely and in the order indicated by the numbers on the strips. Carefully check the joints between the strips after every strip that is added.


Note! *No protruding edge may be felt!*

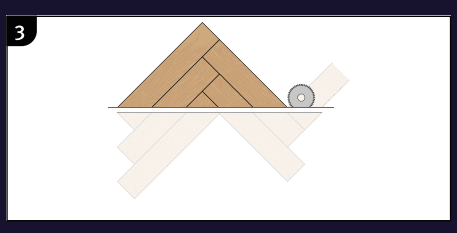

Cut the triangle according to the indicated red line. Depending on the kind of saw you use, it may be useful to dismantle the triangle before sawing.


Note! *The excess (below the line) is to be saved for last row installation.*

2. Measuring the room

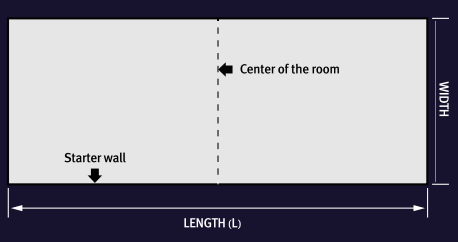


Define the wall from where you intend to start the installation. Mark out the center of the room.


3. Calculating the number of triangles

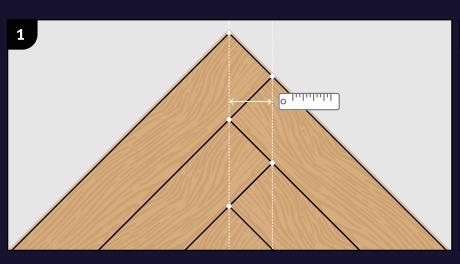


Measure the distance between the two straight lines, originating from the corners of the strips.

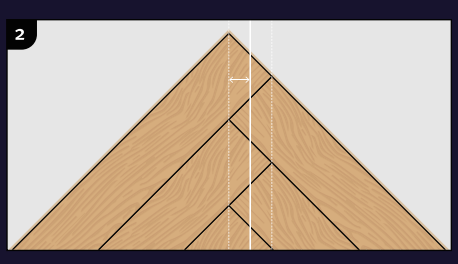

Devide this number by two, and get the **X measurement.**

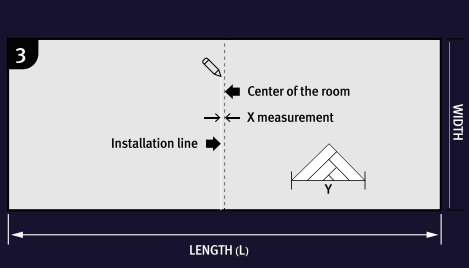


Drawing the installation line
Start from the center of the room. Parallel offset the line using the X measurement as distance.

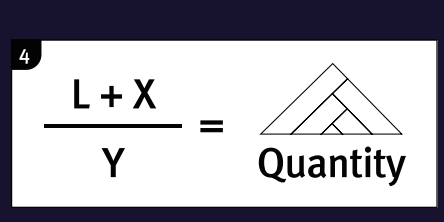

Calculate the number of needed starting triangles with the formula to the left.

Note! *Round up to the next full number.*

4. Start installation

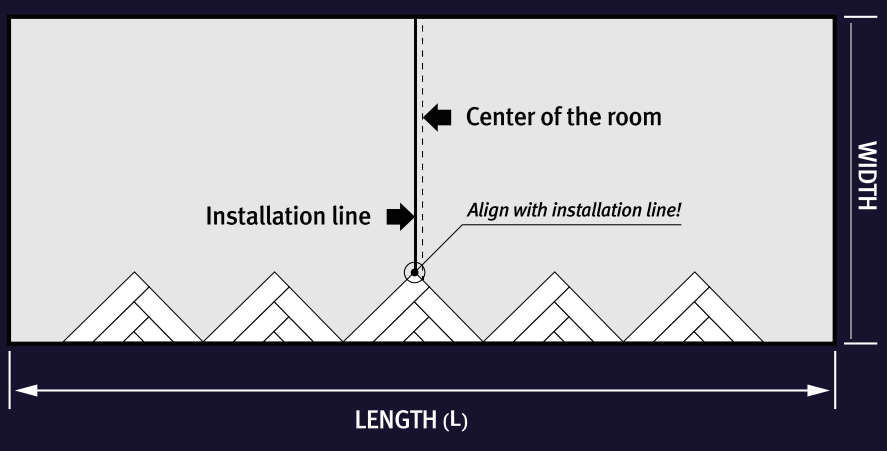


Lay out the triangles with their long side towards the starting wall.

Align the center triangle top with the installation line.

Make sure the underlay material is installed beforehand and the installation line remainsvisible.

Note! Use expansion wedges for the expansion gap.

5. Finalising the start row

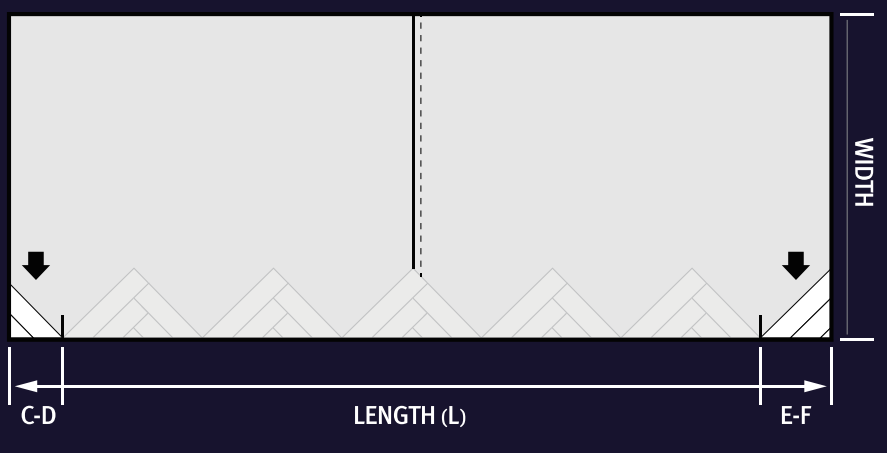


Now cut the distances C-D and E-F from the remaining triangle(s), and position them.


Note! In case you have calculated and built an uneven number of triangles, leave the outer two triangles aside For the case that you have built an even number of triangles, lay one aside.

200*400mm(单页 正反面印刷)


Further installation of pattern

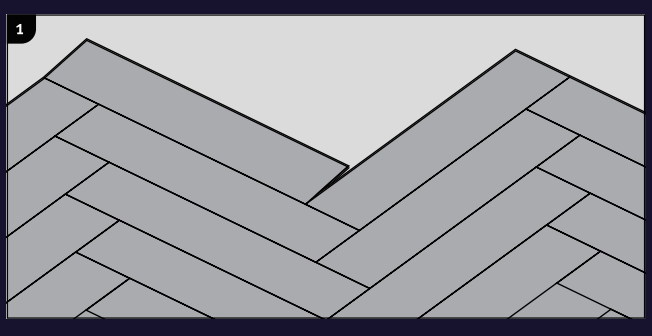


The boards need to be locked into one another, using the 5Gi system. To connect a new board you have to use a rubber hammer.

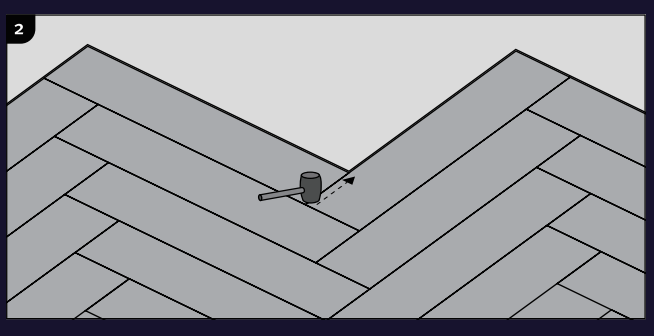

Use a rubber hammer and slightly knock at the 5Gi system to connect the short side. Start in the corner and work towards the end of the board.

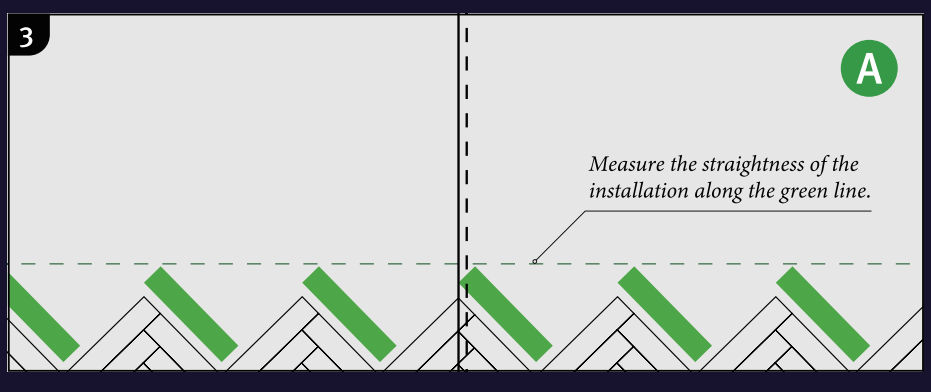


Install **A-strips** to connect all triangles. The joints between the A-strip and the triangle need to be checked very carefully. No protruding edge may be felt!Cut the most left piece to fit into the room, concidering an expansion gap. Measure the straightness of the installation along the green line. Repeat that measuring with the straightedge progressively throughout the installation. Deviations need to be corrected, should they occur (see schematics below).

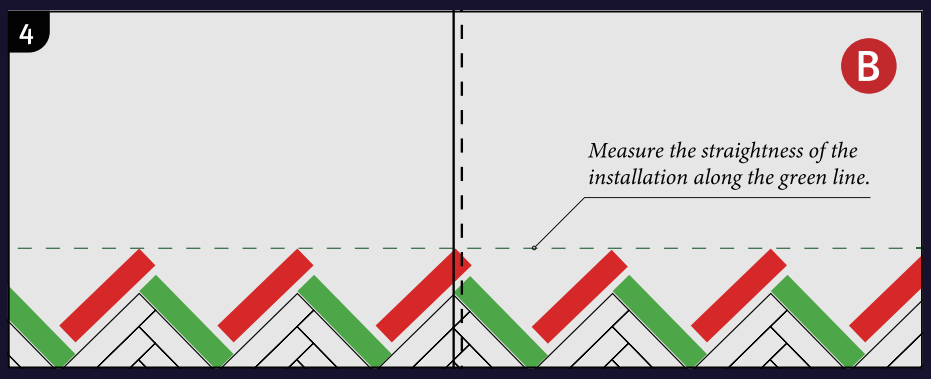

Now install **B- strips** and cut the most right piece to size.


Last row installation

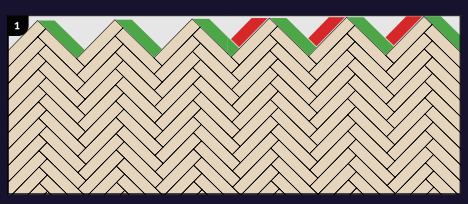

This alternating installation of A-strips and B-strips continues throughout the whole room. It is important to check frequently that:

- all expansion wedges remain in their position.
- all joints are closed and the strips are locked into one another.
- you follow the installation line.
- the tops of the strips in one line remain straight and perpendicular to the installation line.


Note! *Measure approx every fifth row.*

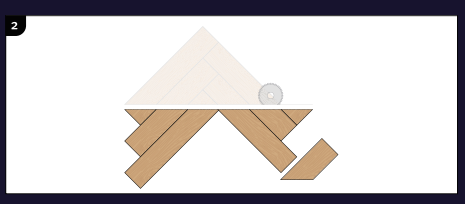

Excess pieces from starting triangles:


Dismantle the exess material from the starting triangles. Use it to close the open gaps to the finishing wall. Use the leftover from strips 1, 2 etc. consecutively and cut to size if necessary.

Installation around radiator/heating pipes

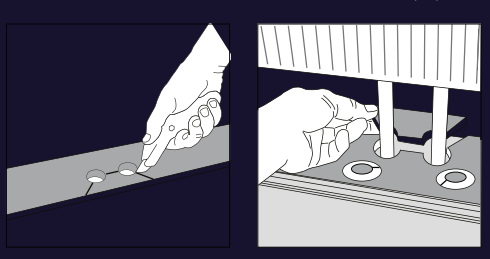

Drill holes two times larger than the diameter of the pipes. Remove a piece of the strip with a utility knife or a saw. Put the strip on one side of the pipes and the removed piece on the other side.

When angling is not possible

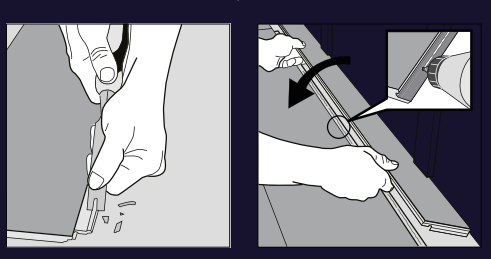

Remove the locking element according to the picture. Use a applicable glue to connect the strips. Press- place wedges between the glued strip and the wall.